


Normal Takeoff and Climb

Gauge Scan

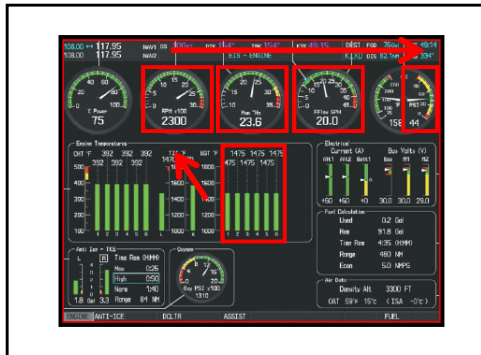

- Add power slowly
- Check Gauges:
 - 6 EGT's rising
 - RPM and MP
 - Fuel Flow
 - Oil Pressure


AT 72 KIAS

- Rotate to ~12° Pitch


- ALL OF:
- Positive ROC
 - Clear of Obstacles
 - 80 KIAS
 - Retract Flaps

- AT 1000' AFL
- Lower Nose to ~5° Pitch
 - Boost As Required
 - Climb Checklist

Short Field Takeoff and Climb

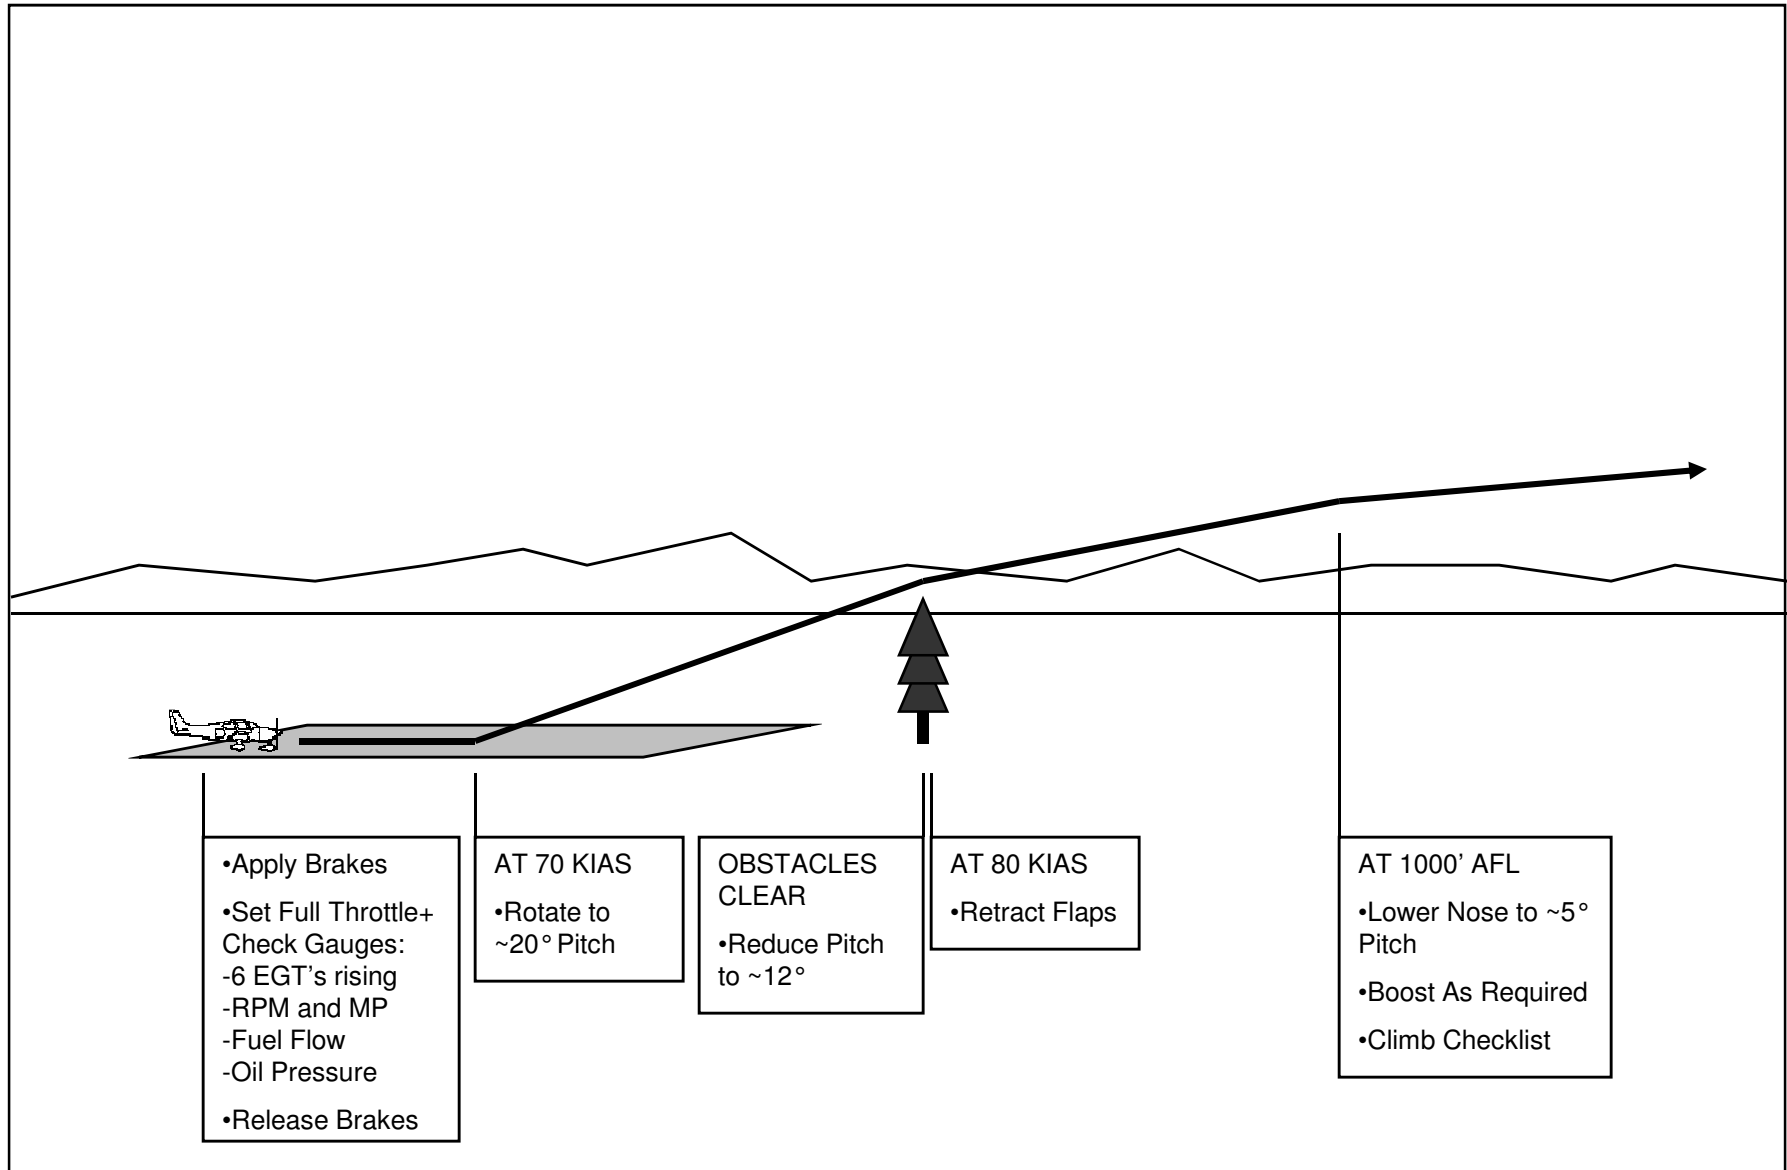


Normal Traffic Pattern

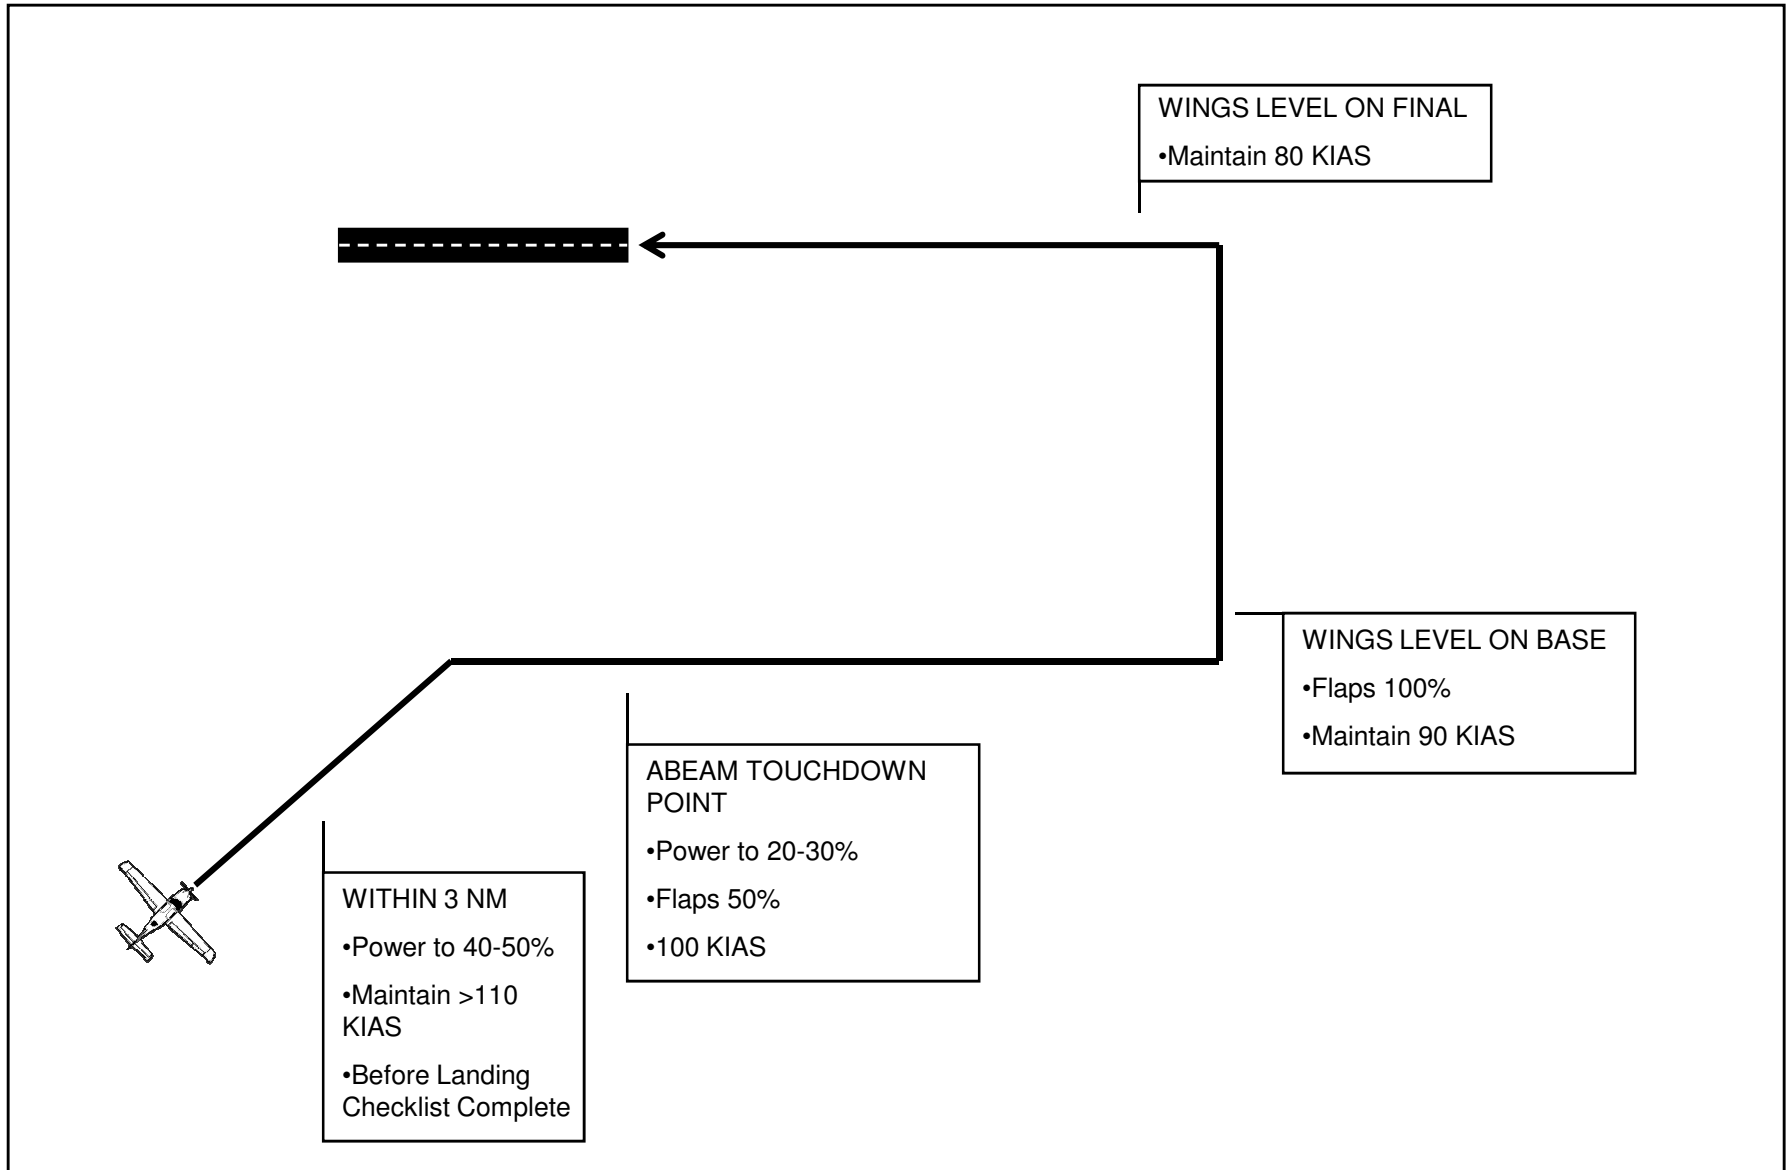

Missed Approach

- | | |
|---|--|
| <ul style="list-style-type: none">•Power Up•Pitch Up•Clean Up | <ul style="list-style-type: none">•One•Two•Three |
|---|--|

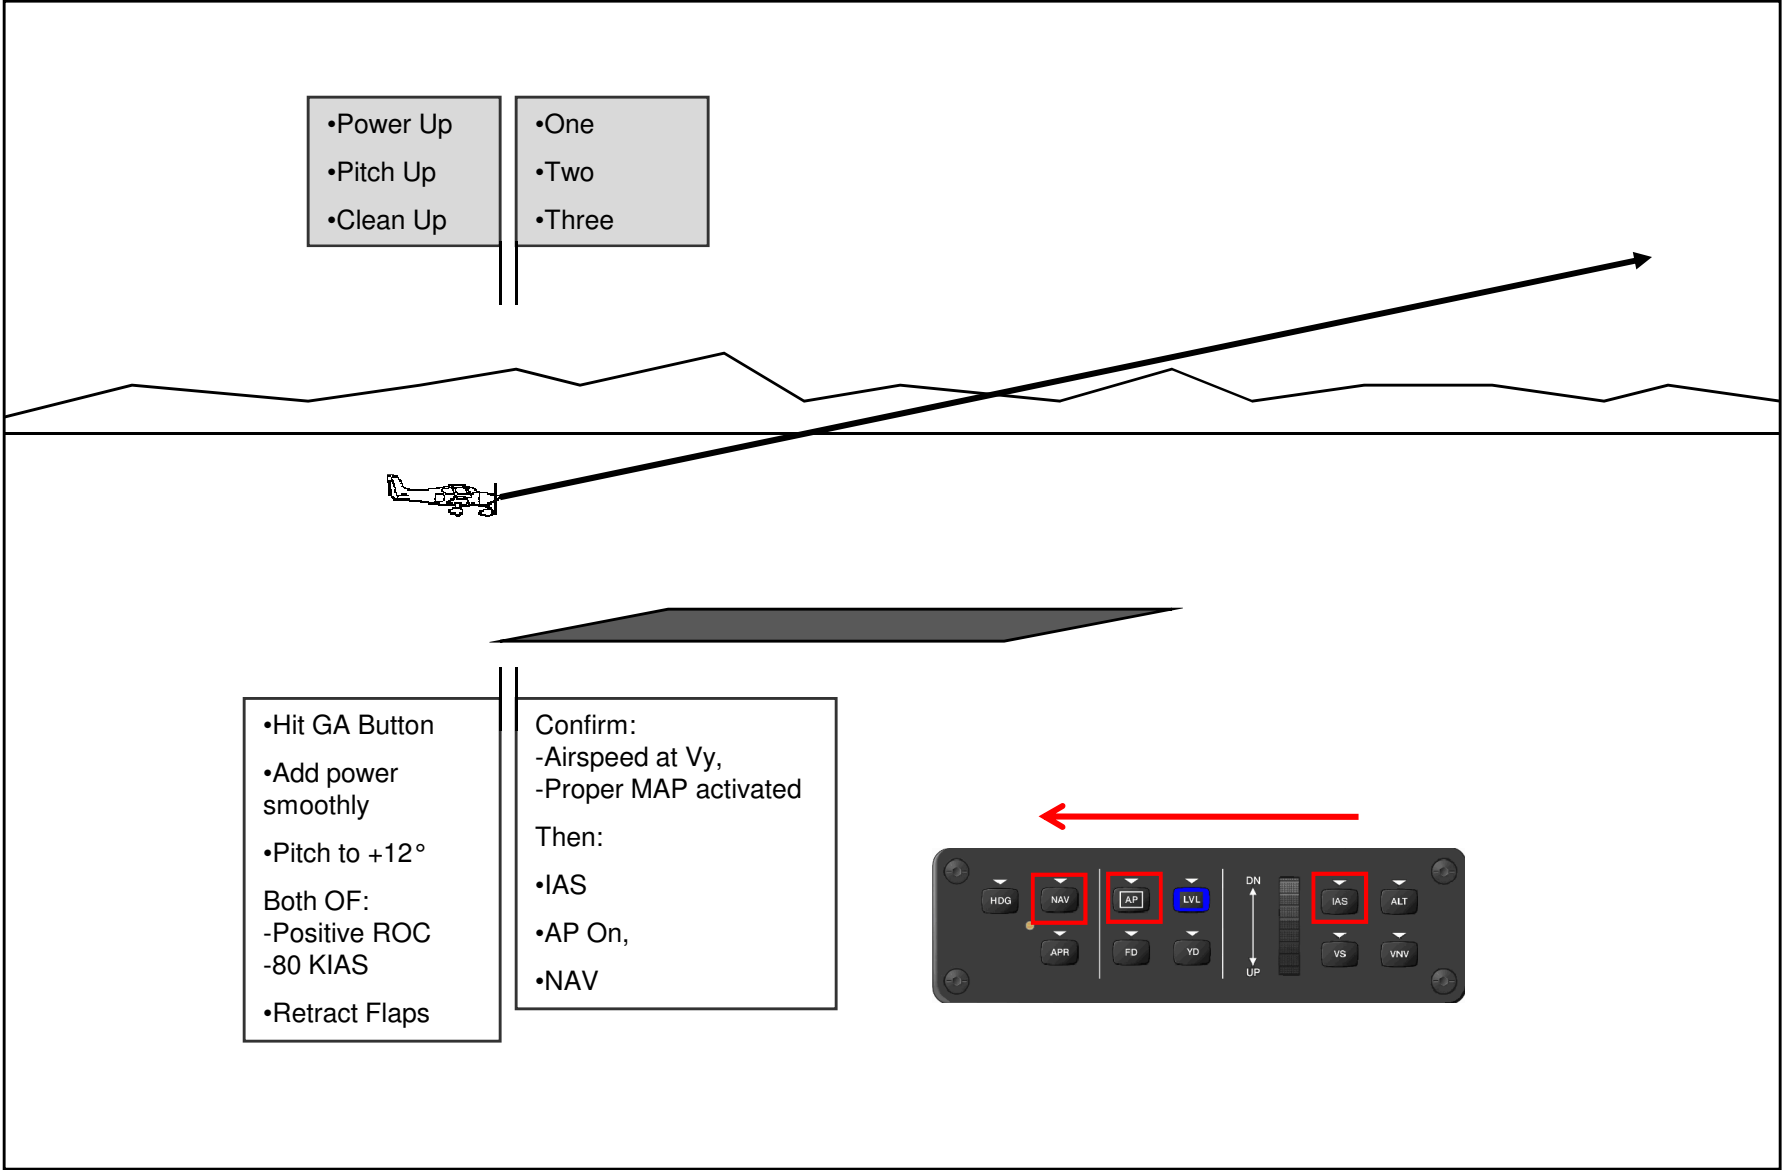

- Hit GA Button
 - Add power smoothly
 - Pitch to +12°
- Both OF:
- Positive ROC
 - 80 KIAS
- Retract Flaps

- Confirm:
- Airspeed at Vy,
 - Proper MAP activated
- Then:
- IAS
 - AP On,
 - NAV

